


TD3 Fitting to Small Boots

If your new Standard TD3s don't fit your snowboard hard boots, here is a trick to get them to work.



Start by removing the toe assembly from the binding. Once you have it removed, then unscrew the bolt from one side of the shaft in the toe block. You will be pulling it through the lugs to remove them. Remove the screw, shaft, and washers.

You should now have something that looks like this

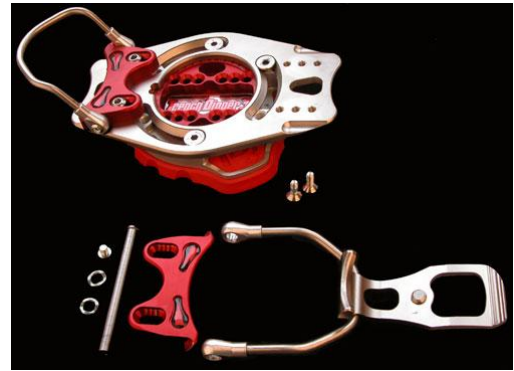

Take the sole block, and flip it around so it is facing the other way. Put the shaft, washers, and screw back in place on the lugs.

Make sure that the shaft fits into the lug like so:



The other side should look like this. Both should be flush with the lug.

Then put the toe assembly back on to the binding. It will look backwards – it is!

